

WARNINGS AND SAFETY INFORMATION

1. Furniture assembly must be performed according to the manufacturer's instructions to avoid the risk of accidents or damage to the product.
2. Ensure you have all the necessary tools for assembly, such as a flat-head screwdriver, Phillips-head screwdriver, hammer, scissors, etc.
3. Do not use the furniture if any structural parts are damaged or missing.
4. Place the furniture on a flat, stable surface to prevent instability and reduce the risk of tipping over. Improper placement may also lead to deformation of furniture components.
5. When moving or carrying the furniture, hold it with both hands by the fixed parts, typically the vertical elements (e.g., legs, sides). Avoid holding it by horizontal parts, as they may not support the weight of the entire piece.
6. Do not sit, stand, or use the furniture as a platform or stepping stool. It is not designed to bear heavy loads, and such actions may cause serious damage or accidents. Always follow the maximum weight limits stated in the assembly instructions.
7. Use the furniture only for its intended purpose and avoid repurposing it.
8. Children must not participate in the assembly of the furniture. Keep all assembly areas, components, and packaging away from children. Swallowing small parts or packaging materials could lead to choking or suffocation.
9. Furniture is not a toy. Avoid walking, running, jumping, or standing on it.
10. Do not place the furniture within 1.5 meters of active heat sources such as radiators, stoves, fireplaces, or heaters.
11. Furniture may have sharp edges or corners—ensure they are properly safeguarded from children.
12. Altering or modifying the furniture's structure is strictly prohibited, as this may lead to accidents or health hazards. The manufacturer is not liable for any damage resulting from unauthorized changes.
13. The chair/barstool is designed for use by one person only.
14. Periodically check all screws and tighten them if necessary. Loose screws can cause accidents or injury.
15. Do not overtighten screws, as this may damage the furniture or its mounting, leading to instability and decreased durability.
16. If using the chair/barstool on a slippery surface, ensure the feet are equipped with non-slip pads.
17. Do not rock on chairs or barstools, as this can lead to falls and pose health risks.
18. Never sit on the seat while standing, kneeling, squatting, lying down, or attempting to stand on your head.

19. Do not sit on the armrests, backrests, or supports. Doing so may damage these parts and cause the chair/barstool to tip over.
20. Wooden chairs/barstools may have sharp edges. Keep them out of reach of children to prevent injury.
21. When moving chairs or barstools, always hold them by the fixed parts. Do not grab buttons, protruding decorative elements, or other fragile parts.
22. Chairs and barstools are not toys and should not be used by children for play.
23. Barstools should not be used by children aged 0-8 without adult supervision.

MAINTENANCE AND CARE INSTRUCTIONS

1. Use cleaning agents specifically designed for upholstered furniture to clean soiled upholstery.
2. Clean wooden parts with cleaning agents designed for wooden surfaces that are non-abrasive.
3. Clean plastic parts with cleaning agents intended for plastic surfaces that do not scratch.
4. Clean metal parts with cleaning agents intended for metal surfaces that do not scratch.
5. Clean glass or ceramic parts with cleaning agents specifically designed for glass or ceramic surfaces that do not scratch.

FURNITURE DISPOSAL INSTRUCTIONS

The product must be disposed of in accordance with applicable environmental protection and waste management regulations. For proper recycling, please contact local authorities or a company specializing in household waste disposal, including large items. They will provide information on the nearest designated collection point.

WARRANTY TERMS

NORDLYS offers a 24-month warranty on all products against manufacturing defects.